
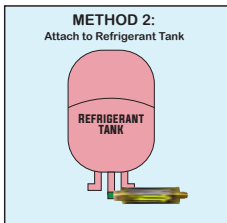


FLASH CHARGER

LIQUID REFRIGERANT LOW SIDE CHARGER

INSTRUCTIONS:

1. The Flash Charger can be connected to the Low Side manifold fitting of your manifold gauge between the manifold and the blue hose (See Method 1). Alternatively, you can connect it directly to the refrigerant cylinder (See Method 2).
2. Connect your manifold gauge hoses. Charge the system in liquid and in accordance with the manufacturer's specifications. Refrigerant will be automatically metered into the system.
3. A vacuum can also be performed with the Flash Charger connected. The check valve will automatically open for unrestricted vacuuming.

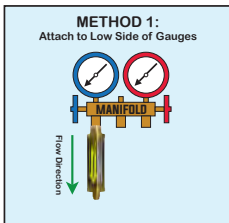

CAUTION: FOR USE BY QUALIFIED PERSONNEL ONLY

Please always wear eye protection and follow all safety procedures regarding refrigerant handling.

Professional HVAC Products LLC
1309 Coffeen Avenue, STE 1200
Sheridan, Wyoming 82801
TEL: +1-888-675-6088
EMAIL: service@leaksavers.com
www.leaksavers.com